

User Manual

H5

WiFi Action Cam



2 inch
LCD



170°
Wide Angle
Lens



1080P
H.264

Full HD




Waterproof
30m



1.5 Hours

THE BASICS

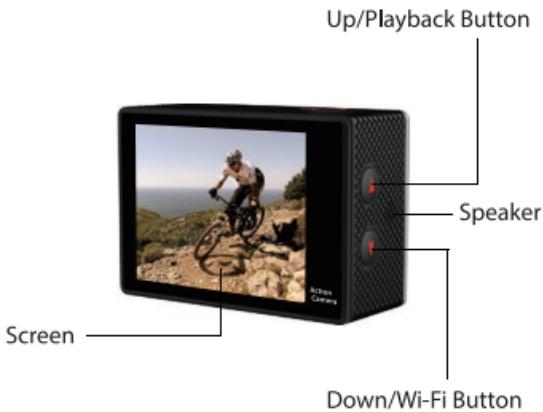



WATERPROOF HOUSING




Attention: If you use the case in the water, wash it well and dry it after use. Do not use any type of cleaning product.



ACCESSORIES

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.



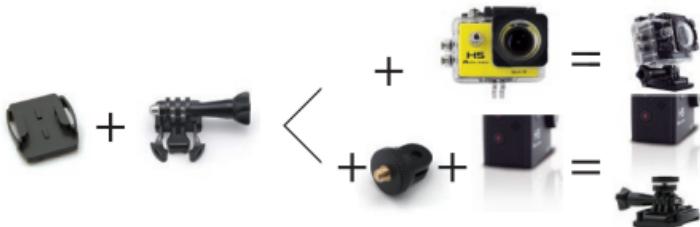

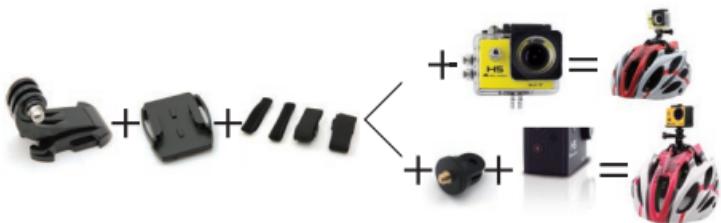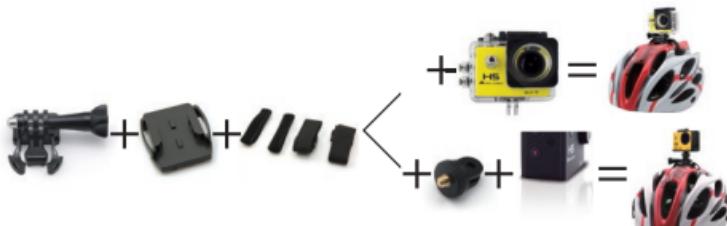GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments.

To power ON:


Press the **Power/Mode** button.

To power OFF:

Press and hold the **Power/Mode** button.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode** button to cycle through camera modes and settings. The modes will appear in following order:

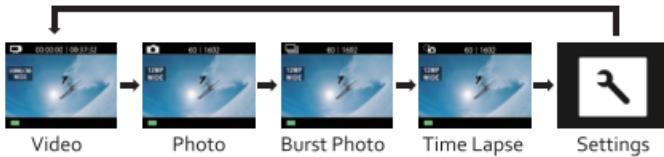

**Video**Record Video

**Photo**Capture a single photo

**Burst Photo**Capture photo bursts

**Time Lapse**Shoot a series of photos
at set time intervals

**Settings**Adjust camera settings,
resolution and more

SETTINGS



Press the **Shutter>Select** button to enter the settings menu. Repeatedly press the **Power/Mode** to cycle through options and press the **Shutter>Select** button to select the desired option. Or use the **Up/Playback** or **Down/Wi-Fi** button to cycle through the various options.

Video resolution: 1080p 30fps/720p 60fps

MicroSD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins

Looping Video: On/Off

Time Stamp: Off/Date/Date & Time

Exposure:

+2.0/+1.7/+1.3/+1.0/+0.7/+0.30/0

Photo resolution: 12M/8M/5M/2M

Burst Photo: 3 photos

Time Lapse: Off/2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/French/Spanish/Italian/
German/Portuguese/Dutch/Polish/Czech/
Turkish/Russian

Date and Time: MM/DD/YY, YY/MM/YY o DD/
MM/YY

Sound Indicator: Shutter On/Off, Start
Up1/2/3, None, Beep On/Off, Volume 0/1/2/3

Screen rotation 180°: On/Off

Screen saver: Off/1min/3min/5min

Power save: Off/1min/3min/5min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

To record video verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode** button repeatedly until it appears.

To start recording:

Press the **Shutter>Select** button. The camera will emit one beep and the **Camera Status Light** will flash while recording.

To stop recording:

Press the **Shutter>Select** button. The **Camera Status Light** will stop flashing and the camera will emit one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your video will be saved before the camera powers OFF.

PHOTO MODE



Photo

To capture a Photo verify the camera is in Photo mode. If the **Photo** icon **Power/Mode** icon on your camera's LCD screen is not showing, press the **Power/Mode** button repeatedly until it appears.

To take a photo:

Press the **Shutter>Select** button. The camera will emit the camera shutter sound.

BURST PHOTO MODE



Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode** button repeatedly until it appears. In **Burst Photo** mode, your camera will take 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter>Select** button. The camera will emit the camera shutter sound.

TIME LAPSE MODE



Time Lapse

To capture a **Time Lapse** verify the camera is in **Continuous Lapse** is ON and the camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode** button repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at 2, 3, 5, 10, 20, 30 or 60 second intervals.

To take Time Lapse:

Press the **Shutter>Select** button. The camera initiates countdown and emits the camera shutter sound each time a Photo is taken.

QUICK MODES



To enter the Quick Modes menu

1. Verify the camera is in **Camera modes**.

2. Press and hold the **Shutter>Select** button for three seconds.
 3. Repeatedly press the **Power/Mode** button to cycle through **camera modes**.
 4. Press the **Shutter>Select** button.
 5. To exit, hold down the **Shutter>Select** for three seconds.
-

PLAYBACK

Playing Videos and Photos

1. Verify the camera is in **Camera Modes**.
2. Press the **Up/Playback** button to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode** button to cycle through **Video** and **Photo**.
4. Press the **Shutter>Select** button to select desired option.
5. Use the **Up/Playback** or the **Down/Wi-Fi** button to cycle through the various options.
6. Press the **Shutter>Select** button.
7. To return to the **Playback** menu, press the **Power/Mode** button.
8. To exit, hold down the **Up/Playback** button for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **8GB, 16GB** and **32GB** capacity **microSD, microSDHC,** and **microSDXC** memory cards.

You must use a **microSD** card with a **Class 10** speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging the battery:

1. Connect the camera to a computer or USB power supply.
2. The **Charging Status Light** remains **ON** while the battery is charging.
3. The **Charging Status Light** will turn **OFF** when the battery is fully charged.

*Charging Time: 3-5 hours.

CAMERA APP

The **Ez iCam APP** allows you to control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam APP** to your smartphone or tablet at the **Apple Store** or **Google Play**.
2. Press the **Power/Mode** button to power camera **ON**.
3. Make sure the camera is in **Camara modes**.
4. Press the **Abajo/Wi-Fi** button to turn on **Wi-Fi**.*
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**iCam-Midland H5**", followed by a series of numbers.
6. Enter the password:**"1234567890"**
7. Open the **Ez iCam APP** on your smartphone or tablet.

* Press and hold the **Down/Wi-Fi** button for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smart-phones and tablets listed below:

For Apple iOS:

* iPhone 5, 5S, 6 & 6Plus (iOS 8)

* iPad Air & Mini (iOS 8)

For Android:

*Android 4x Quad-core devices



iOS / Android
App Download

COMPATIBILITY

*Compatibility varies by device. Content play-back, sharing and access to the camera's memory card might be not available on some devices.

LIMITED WARRANTY

The warranty does not limit the user's statutory rights under applicable National laws relating to the sale of consumer products.

During the warranty period, any fault attributable to defects in materials, design or workmanship will be repaired in a reasonable period of time free of any charge for repair. In the event repair is not possible, we should provide the user with a similar or better featured device or accessory. The warranty period starts at the time of product's original purchase by the first end-user.

The warranty period lasts:

- **24 months** for the device or main unit.
- **6 months** for accessories (batterys, chargers, antennas, headphones, cables).

Any claim for defective product must be noticed within a reasonable period of time from when the defect was first observed and, in any case, after the expiration of the warranty period.

The warranty does not cover:

- The product deterioration by normal use.

- Defects caused by misuse with, or connection to, any accessory or software not genuine Midland.

Warranty is not enforceable:

- If the product has been dismantled, modified or repaired by anyone other than the authorized service centre or if it's repaired using unauthorized spare parts.
- If the product has been exposed to environmental conditions for which it has not been designed.
- In case of corrosion, oxidation or spill battery fluid.
- If the serial number has been removed, erased, altered or is illegible.

Nobody will be indemnified for the inactivity period of the device nor can expect refund or claim for direct or circumstantial damages due to an inappropriate use of the device.

To access this warranty, please fill out the assistance application form at
www.midlandeurope.com

SPECIFICATIONS

Video: 1080P@30fps and 720P@60/30fps MOV format	Time Lapse, Language, Date&Time, Screen rotation, Auto Power OFF.
Photo: 12/10/8/3 MP JPEG format	Multilingual menu: EN/IT/ ES/PT/DE/DU/FR/RU/PL/TR/ CZ
Lens: 6G wide-angle170°	Connections: USB 2.0 & HDMI
Sensor: CMOS 5MP	Autonomy up to 90' in 1080P with deactivated Wi-Fi
Wi-Fi 802.11b/g/n	Memory: Micro SD class 10 card slot up to 32GB
Water resistance: up to 30m with case	Battery: Li-ion 900mAh
Display LCD color 2"	Dimensions: 59.3*29.3*41.1mm
Speaker and microphone built-in	Weight: 58 gr with battery
Operational modes: Video/ Photo/Time Lapse/Player	
Configurable functions: Resolution video/photo, Date, Exposure, Burst photo,	

Included accessories: Waterproof case up to 30m, Helmet mounts, Adaptor clip, Standard photo mount (2), Self-shooting mount, 90° adaptor, 180° adaptador, Elongate adaptor, Adhesive mounts (2), Ventilated helmets bandages, Tethers, USB cable, Lens cloth.

 CTE international <small>The World in Communication</small>	EC Declaration of conformity EC Directive 99/5 -2004/108- 2006/95 2015060401_Rev1	DO 7.1,4,4 Rev 6 Autorizzato il 15/01/2015 Autorizzato da Rebecca Bardella 
--	--	--



Manufacturer: CTE INTERNATIONAL srl
 Address : Via Roberto Sevardi n° 7 - 42124 Mancasale (Reggio Emilia) ITALY
 Product name : HS
 Product Type : SPORT DV
 Brand : MIDLAND

The product described above is in conformity with the following specification based on sample testing :

Item of 99/05/CE	Standard Identification	Edition
3.1a	EN 60950-1	2006, A11:2009, A1:2010, A12:2011, A2:2013
3.1b	EN 301 489-1	V1.9.2
3.1b	EN 301 489-17	V2.2.1
3.2	EN 300 328	V1.7.1
3.1a	EN 62479	2010

Supplementary information to the conformity assessment result on which the declaration is based :

Conformity assessment procedures are referred to art.10(4) linked with Annex III of Directive 1999/5/ec.The test sample fulfills the requirements specified above, on the basis of test result and their evaluation. The product herewith complies with the essential requirements of EC Directive 99/05/EC, 2004/108/EC and following implements and modifications, 2006/95/EC and following implements and modifications, 93/97/EC.
 Reference to any marking or other indication (e.g. on the product) exhibited in attachment to this declaration.

Reggio Emilia, 29/10/2015

CTE International srl
 Quality Manager
 Rebecca Bardella

