


Access Control Hardware Manual




Key Function

- OK** Confirm key: make sure your current operation;
- MENU** Menu button: In the initial condition according to the key can enter the management interface;
- ESC** Cancel button: Cancel your current operation;
- ▲ Up key: Turning up menu items;
- ▼ Down key: Turning down menu items;
-  The bell button: Control the doorbell switch;
- Digital** Input digital 0-9;

The wiring diagram

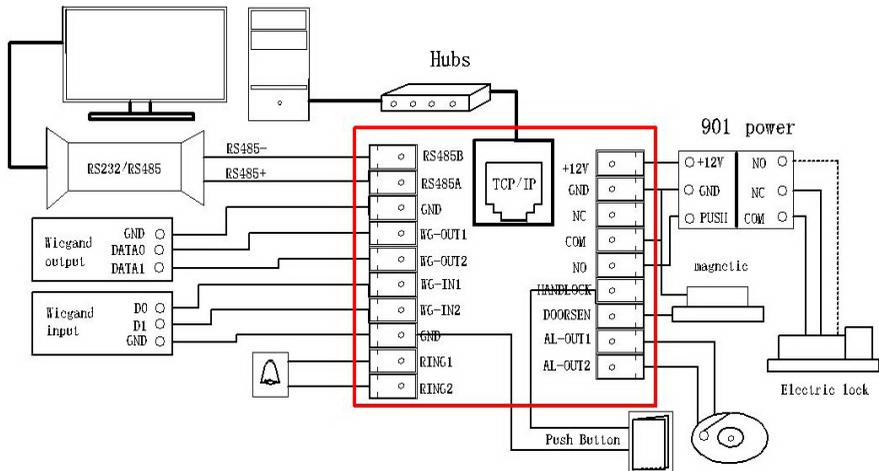


1.1 Registered users

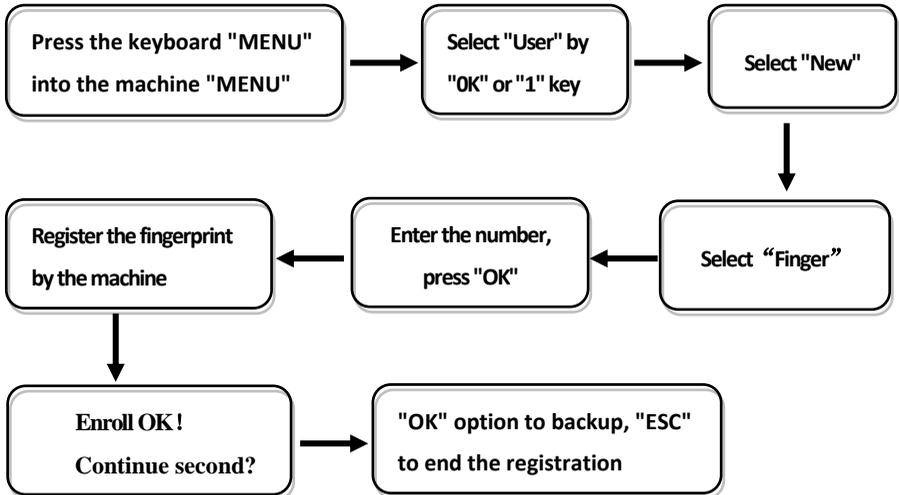


Note: when choosing a password or ID card (machine with the function), the name of the person can be uploaded through the access control software;

1.2 Administrator setting

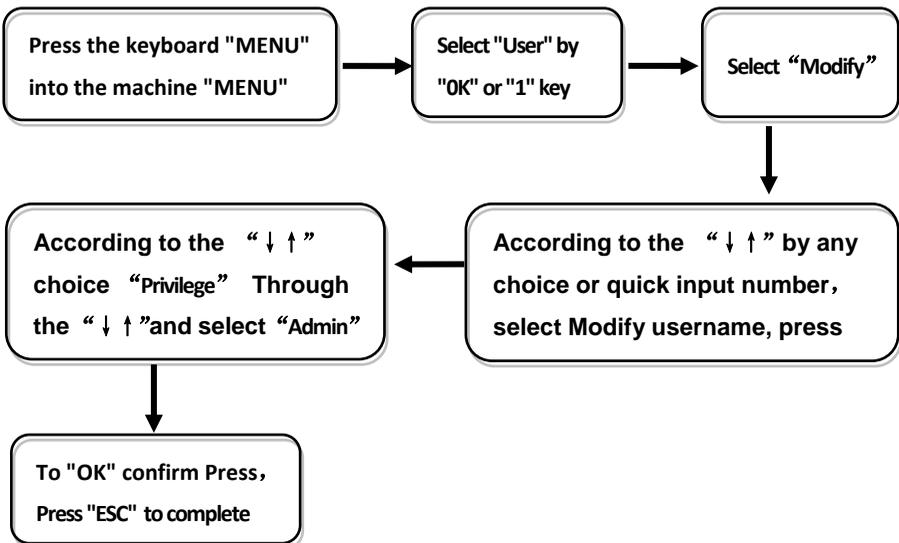


Note: After setting the administrator, the menu needs to be confirmed by the administrator, the success of the menu.

1.3 Communication settings

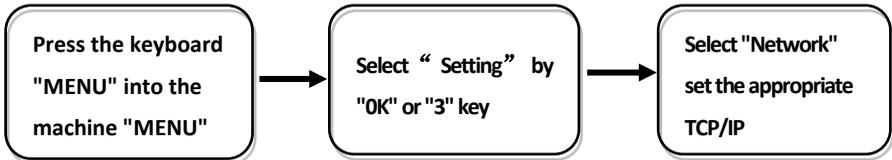

- ☆Baudrate: communication with the computer communications rate, were **9600, 19200, 38400, 57600, 115200** five option;
 - ☆Device IP: the default IP for the **192.168.8.198**, you can according to the need for change;
 - ☆Subnet mask: the default for **255.255.255.0**, you can according to the need for change;
 - ☆Default gateway: the default for **192.168.8.1**, you can be the basis of the need for change;
 - ☆Device port: communication used the port number, the default for **5005**;
 - ☆Server IP: the default for **192.168.0.1**, real-time monitoring of the computer when IP address, you can be the basis of the need for change;
 - ☆Server port: communication port, the default used for **7005**;
 - ☆Realtime Req: real-time monitoring fingerprint access to the computer when whether to send data. The default is no;
- Note: The above setting is based on TCP/IP connection, directly connect USB line if by USB communication.

2. Entrance guard function setting

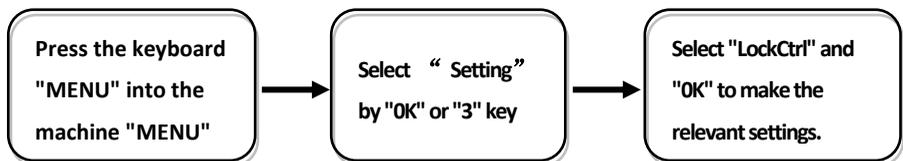

Remarks:

- ☆Time setting: is defined time for a week each day can unlock the definition of the time;
- ☆Users: user entrance guard Settings is the user the lock and unlock the set time combination;
- ☆Unlock Time: is fingerprints machine control open or close the locks of the time;
- ☆Lock Type Set: includes three kinds:: No、Open、Close; “No” refers to not use magnetic switch on the door, “Open” often a door lock is to open, “Close” the door closed to lock the shu started the multicolored;
- ☆Anti Pass: To prevent the following entry;

- ☆Alarm Time: is open the door for some time after began to call the police, this paragraph of time is door magnetic delay
- ☆Turn Off Alarm: in alarm has trigger, and has ruled illegal operation, but not by this option to stop the police.

3. Mounting instructions

① This is the preference when you buy the machine;



② As seen here: grip the two sides of frame cover, pull outward slightly



③ As seen here: take out the frame cover from bottom to top;



④ As seen here: put screws in place red marked, and install the device on the wall.



Noted: Fasten the orientation template on the wall first, and put the sealing ring on, then install the device.

⑤ Put the frame cover back



⑥ Put the frame cover back from top to button



⑦ Lock the frame cover from outside.



4. Packing List

In addition to the machines, the box also contains the following items:

CD × 1PCS, USB Cable × 1PCS, Installation Accessories × 1PCS